

Installation instructions

for original Marzari pipe leadthroughs clay type

- **suitable for:**
clay roof tiles in sizes up to 270 mm in width and plain tiles
- **Universal for large format tiles**

- **Simply cut to the required diameter**
- **Diameters from 20 to 65 mm**



NEW

Now with spout
Material EPDM

**Installed in
no time!**



1. Flatten water fold so that the brick bonding makes good contact



2. Install pipe leadthrough and ensure that it is placed under the roof bricks (all three sides covered over)




3. Form the lead apron



- **Installation quality**
- **Sustainability**
- **No brick breakage**
- **No angle grinder required**
- **Safe, fast installation**

Example installation with
plain tiles

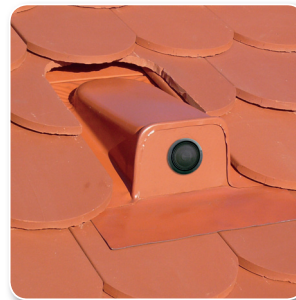

Example installation with
large-format tiles



Rivusol
Solar thermal

Installation instructions

for original Marzari pipe leadthroughs cement type

- **suitable for:**
Frankfurter, Harzer, Doppel-S
and more...

- Simply cut to the required diameter
- Diameters from 20 to 65 mm



NEW

Now with spout
Material EPDM

Installed in
no time!



1. Insert pipe fairlead



2. Place on tile on left and right



3. Cover concrete roof tile and form
lead apron



- Installation quality
- Sustainability
- No brick breakage
- No angle grinder required
- Safe, fast installation

Example installation with
plain tiles



Rivusol
Solar thermal